


ASSEMBLY INSTRUCTIONS FOR YOUR  
BRUNO TASK FLOOR LAMP

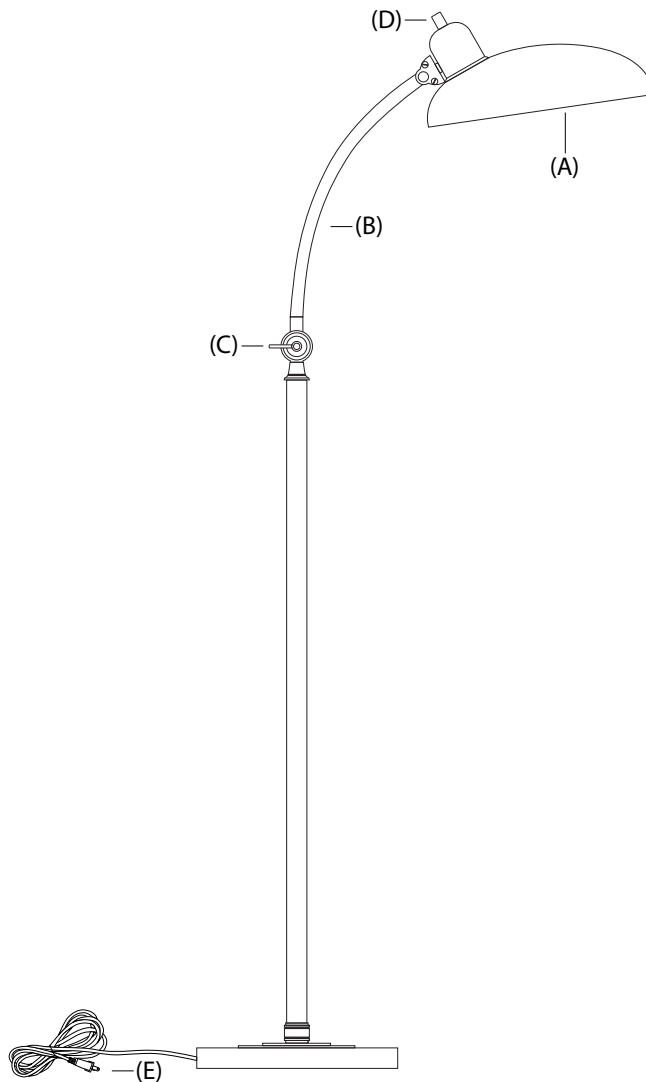

**IMPORTANT SAFETY INSTRUCTIONS:**

- \* This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- \* Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptical.
- \* Switch power off and remove plug from the wall outlet before replacing the bulb.

**ASSEMBLY INSTRUCTIONS:**

NOTE: Do not connect electricity until lamp is fully assembled.

1. Remove lamp parts from packaging. Do not throw away any parts.
2. Place lamp base on level surface.
3. Install one 60W Max. G25, medium base silver tip bulb into socket in shade (A).
4. Remove protective plastic from plug (E). Insert polarized plug (E) into wall outlet.
5. To adjust the height of the lamp, loosen swivel key (C) and move arm (B) into desired position. Retighten swivel key (C) until hand tight to secure the arm in place.
6. Use switch (D) to control power to the lamp.

\*\*To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.\*\*